

**SEGA**  
**Master System II™**

**Instruction Manual**  
**Bedienungsanleitung**  
**Manuel d'instructions**  
**Manual de instrucciones**  
**Manuale d'istruzioni**  
**Bruksanvisning**  
**Gebruiksaanwijzing**  
**Käyttöohjeet**

ENGLISH

DEUTSCH

FRANÇAIS

ESPAÑOL

ITALIANO

SVENSKA

NEDERLANDS

SUOMI

**WARNING: For owners of projection televisions. Still pictures or images may cause permanent picture tube damage or mark phosphor of the CRT. Avoid repeated or extended use of video games on large screen projection televisions.**

## Contents

Parts Identification .....	2
The Sega Master System II Connection .....	4
Powering Up the System .....	7
TV Channel Setting .....	8
Operating the System .....	9
Troubleshooting Chart .....	10


# Parts Identification

## SEGA MASTER SYSTEM II


### POWER BASE




### CONTROL PAD

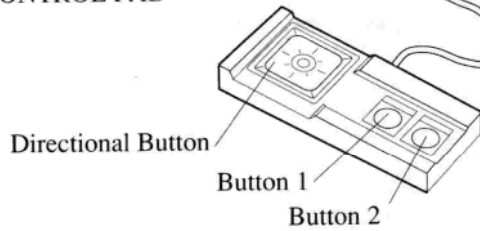

### RF Switch Box

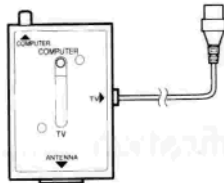


### RF Cable

 


(Except French model)

### Peritel Cable

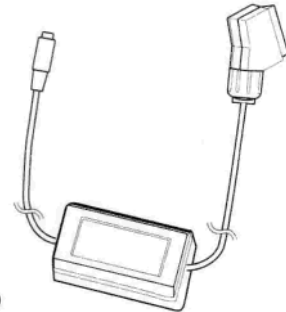


(French model only)


### AC Adaptor

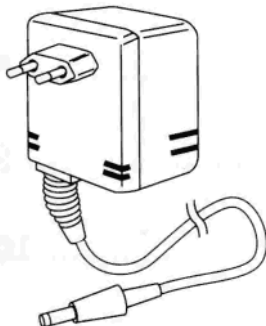

(European countries except U.K.)

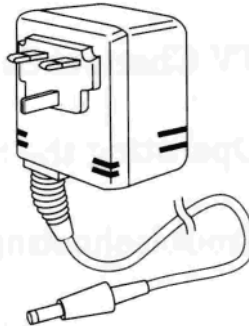


(for U.K.)

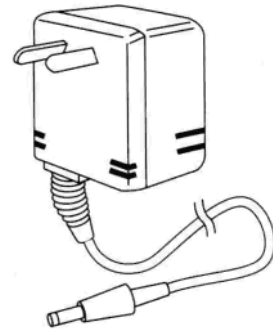

(for Australia and New Zealand)


## Options

CONTROL PAD

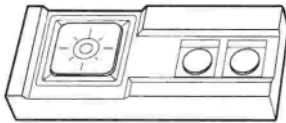


Only one Control Pad comes with the Sega Master System II Component. A second Control Pad may be purchased at stores which carry the Sega Master System II.

GAME CARTRIDGE

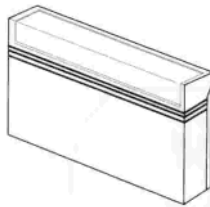

LIGHT PHASER

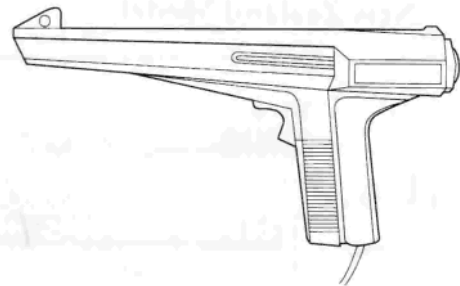

ENGLISH


## Precautions

- When not in use, unplug the AC adaptor from the electrical outlet.
- Do not leave the system or any of its parts in direct sunlight, in damp areas or near a heater.
- When it becomes dirty, wipe it off with a soft, dry cloth. **DO NOT USE WATER WHEN CLEANING!**
- Use the Master System II AC adaptor only. Using a different AC adaptor will damage your system.
- Do not disassemble the Power Base or any of its parts.
- Do not subject the unit to any violent impact, or damage or disfigure it in any way.


# The Sega Master System II Connection

## BACK VIEW OF POWER BASE


### New Zealand Model

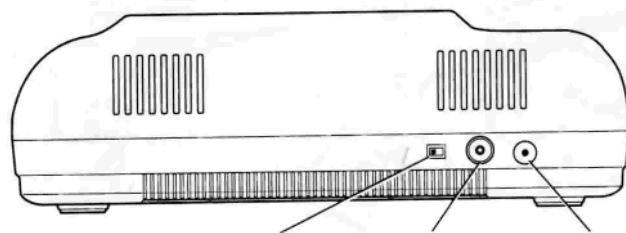


Channel Switch  
CH2 - CH 3      RF Jack      AC Adaptor Jack

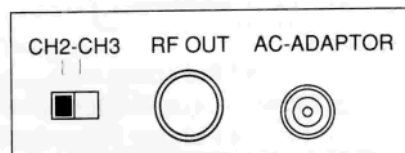


### French Model

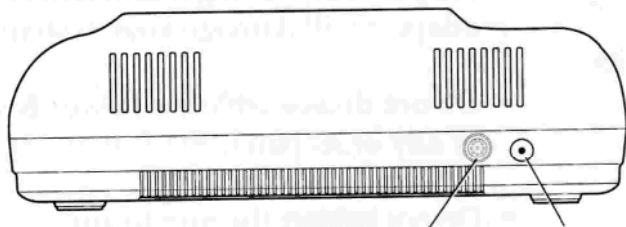


Video Jack      AC Adaptor Jack

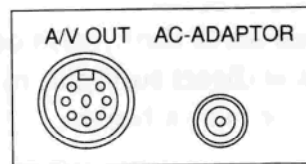

### Other Countries

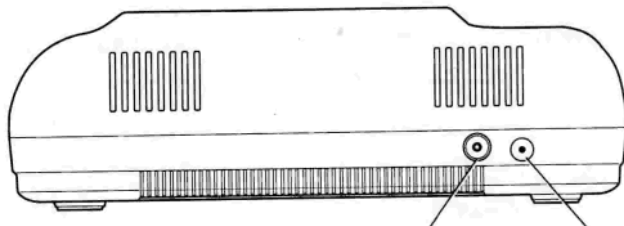


RF Jack      AC Adaptor Jack

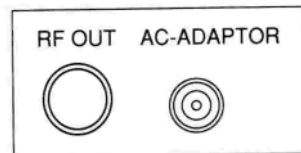

## Connections to TV/Monitor and Antenna

(Except French Model)

ENGLISH

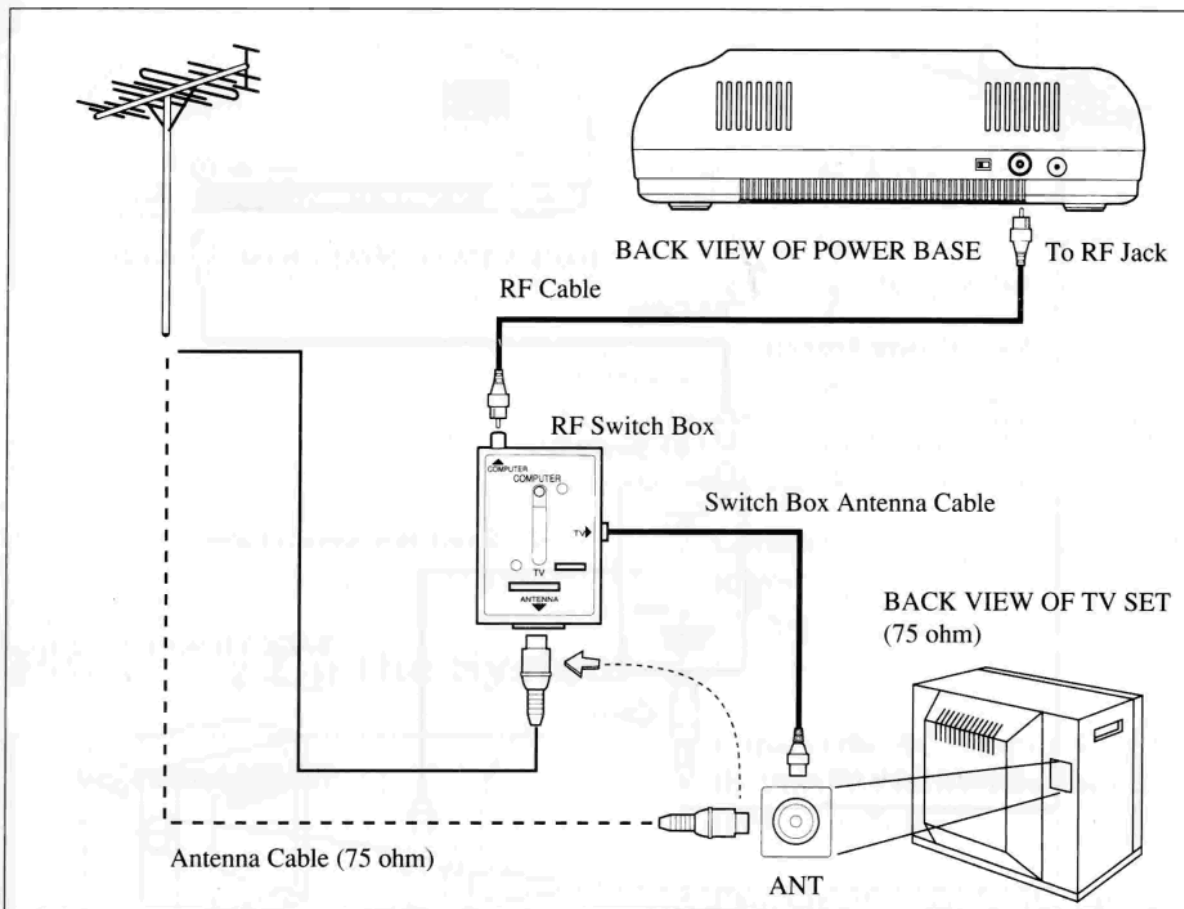


*If a single-plug antenna cable is plugged into your TV (or if you have cable TV), use the RF Switch Box.*

1. Unplug the Antenna Cable from the TV, and plug it into the RF Switch Box.
2. Plug the Switch Box Antenna Cable into the TV.
3. Connect the RF cable between the RF Switch Box and the RF Jack on the back of the Power Base.
4. Finally, set the RF Switch to "COMPUTER" position.

## TV with connected video cassette recorder

(Except French Model)

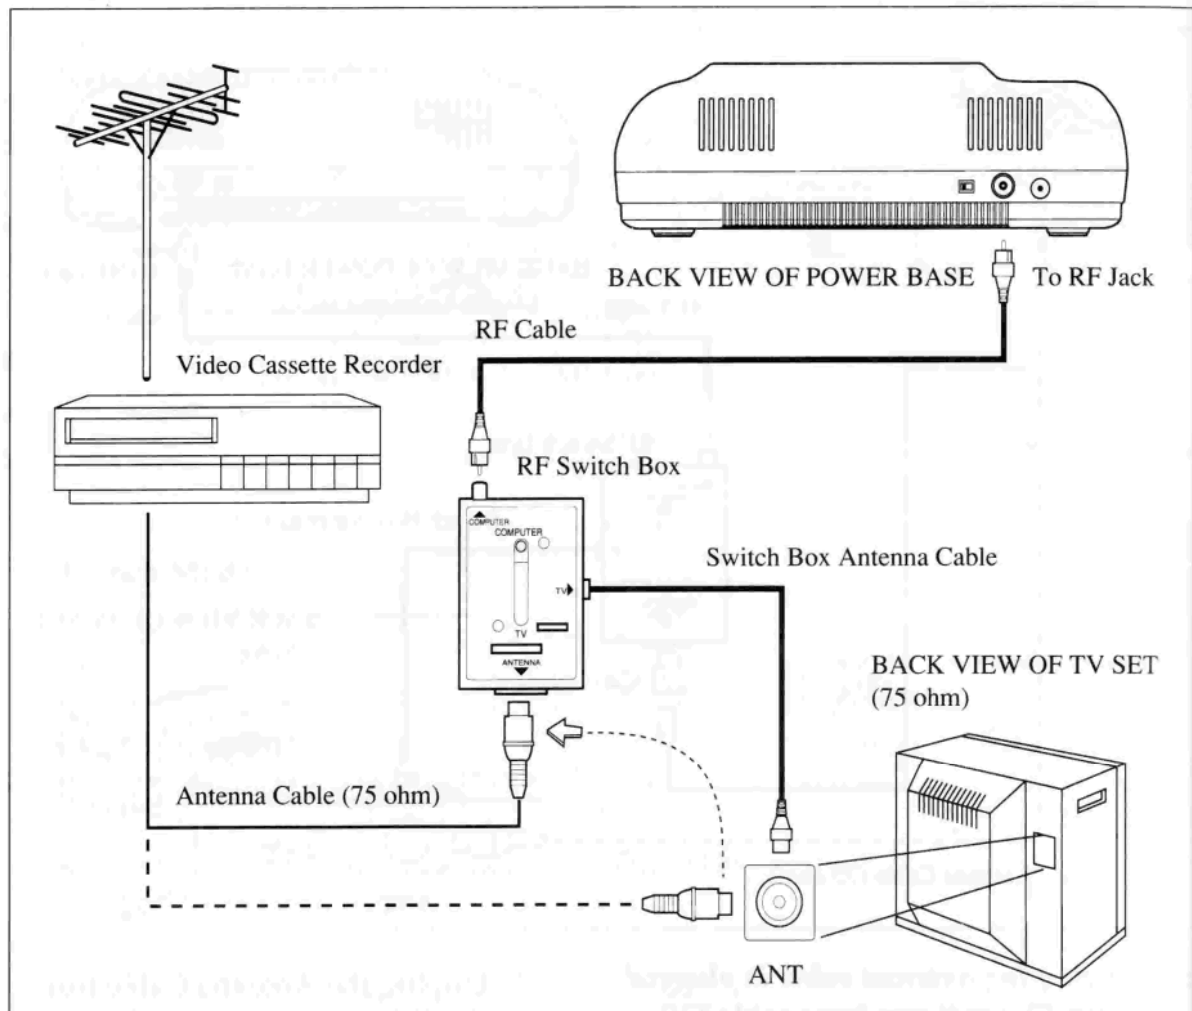


*If a video cassette recorder is already connected between the antenna and the television's terminal, use the RF Switch Box.*

1. Disconnect the video cassette recorder cable from the television's VHF terminal. Then, plug this same cable into the RF Switch Box.
2. Now, plug the Switch Box Antenna Cable into the TV.
3. Connect the RF cable between the RF Switch Box and the RF Jack on the back of the Power Base.
4. Finally, set the RF Switch to "COMPUTER" position.

## Connection to TV and Power Base


(For French Model Only)

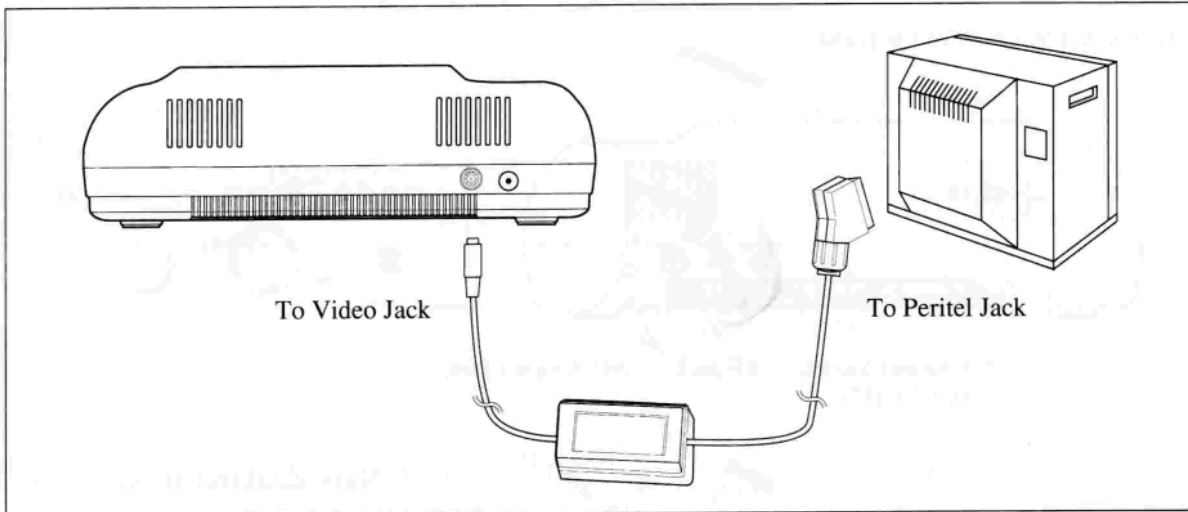



ENGLISH

1. Plug the Peritel Cable into the Video Jack on the back of the Power Base.
2. Connect the Peritel Cable directly to your TV.

## Powering Up the System

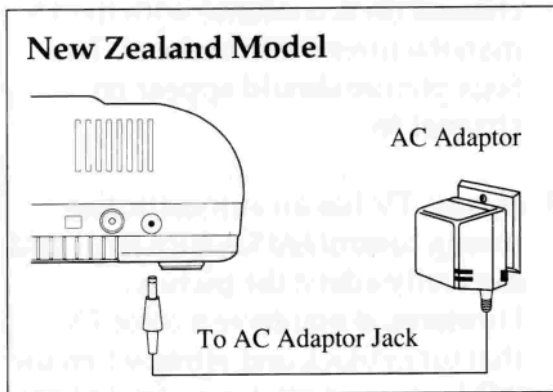


- Connect the AC Adaptor Plug to the Adaptor Jack on the back of the Power Base.
- Plug the AC Adaptor into an electrical outlet.

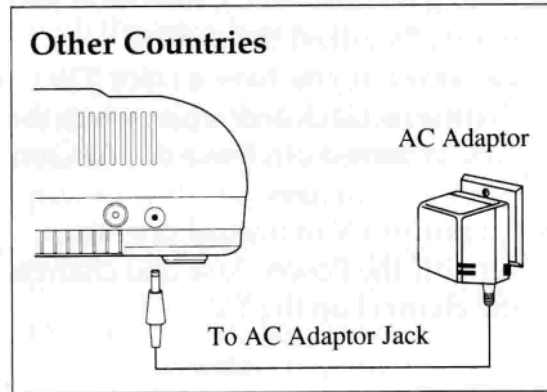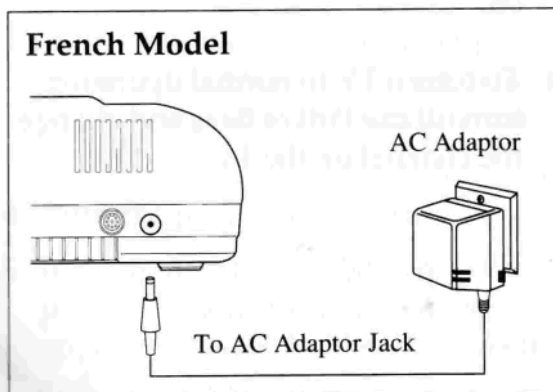



# TV Channel Setting

(Except French Model)

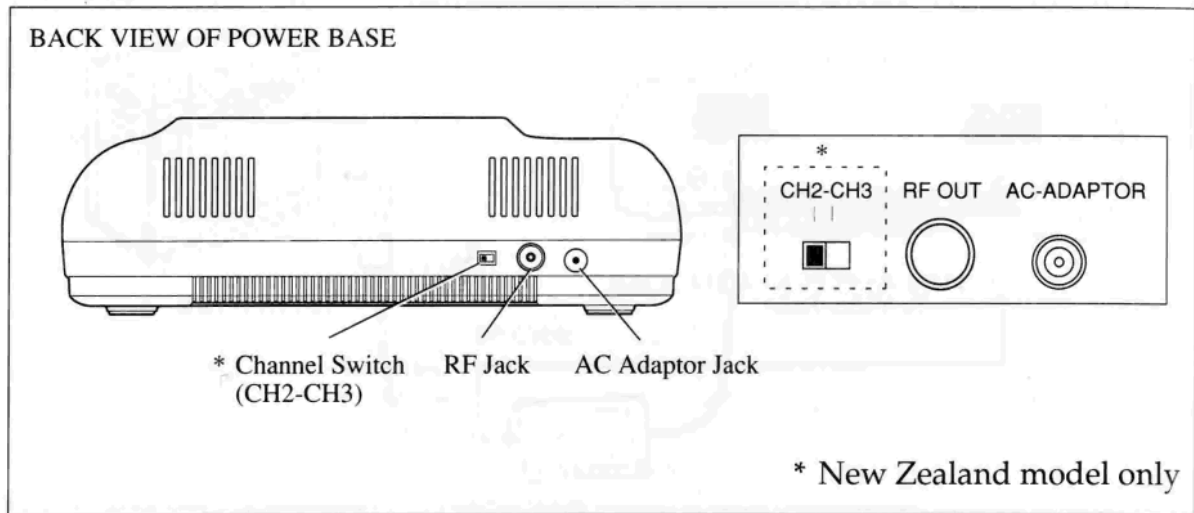


## [New Zealand Model]

1. Set the Channel Switch on the back of the Power Base to CH 2.
2. Set your TV to channel 2.
3. Switch on your Power Base.
4. If channel 2 is used for broadcasting, set your TV to channel 3. Then, be sure to switch the Channel Switch on the Power Base to CH 3.
5. If your TV has an automatic fine tuning control (AFC), turn it off and manually adjust the picture. However, if you have a color TV that turns black and white when the AFC is turned off, leave the AFC on.
6. To return TV to normal operation, turn off the Power Base and change the channel on the TV.

## [Other Countries]

1. Switch on your Power Base.
2. Tune in your TV set on an unused channel (in accordance with the TV manufacturers' instructions). The Sega picture should appear on channel 36.
3. If your TV has an automatic fine tuning control (AFC), turn it off and manually adjust the picture. However, if you have a color TV that turns black and white when the AFC is turned off, leave the AFC on.
4. To return TV to normal operation, turn off the Power Base and change the channel on the TV.

# Operating the System

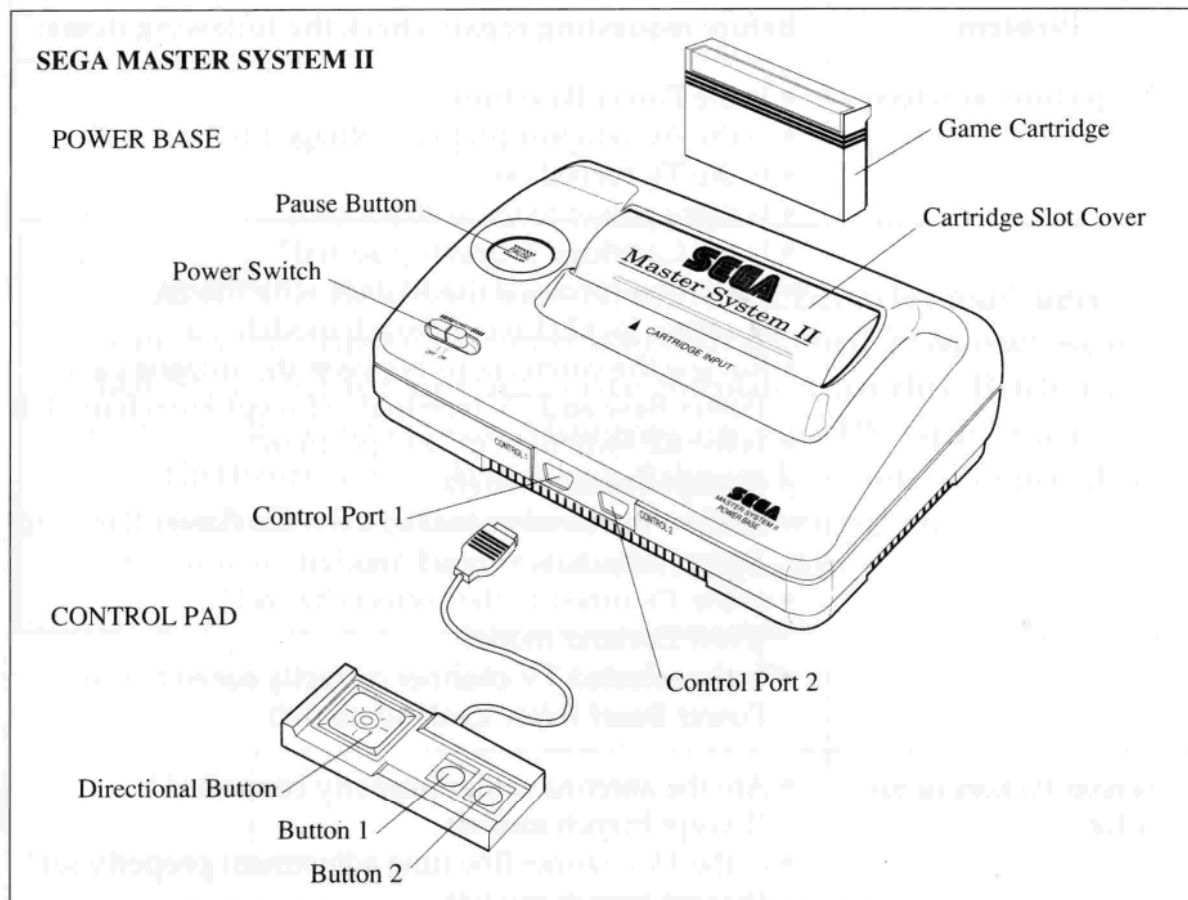

1. Plug a Sega Master System II Control Pad into Control Port 1 on the Power Base. For two players, plug a second Sega Master System II Control Pad (sold separately) into Control Port 2.
2. Turn the power switch off.
3. When you are using a Cartridge, insert it, label facing forward, into the cartridge slot. Press it fully into the slot.
4. Turn the power switch on.
5. If all connections have been properly made, the Sega logo will appear, followed by the title screen and, in some cases, a demonstration of the game.

6. To pause during play, press the Pause Button on the Power Base. To resume action, press it again.

## NOTE :

- All of the previously released Master System cartridges (except for the Sega Card Games) can be used with the Sega Master System II.
- The 3-D adaptor unit cannot be used with the Sega Master System II. Therefore, 3-D games cannot be played with this system.
- ALEX KIDD in Miracle World™ is built in this system. There is no need to insert a cartridge. You can immediately start playing the game by simply turning on the Power Switch.

## Troubleshooting Chart

Problem	Before requesting repair, check the following items:
No picture on screen	<ul style="list-style-type: none"> <li>• Is the Power Base turned on?</li> <li>• Is the AC adaptor properly plugged in?</li> <li>• Is the TV turned on?</li> <li>• Is there power to the wall socket?</li> <li>• Is the Cartridge properly inserted?</li> <li>• Have you confused the RF Jack with the AC Adaptor Jack? (Except French model)</li> <li>• Review the connections between the antenna cable, Power Base and TV terminals. (Except French model)</li> <li>• Is the RF switch set to "RF" position? (Except French model)</li> <li>• Review the connections between the Power Base and Peritel terminals. (French model)</li> <li>• Is the TV tuned to the correct channel? (New Zealand model)</li> <li>• Is the selected TV channel correctly tuned to the Power Base? (New Zealand model)</li> </ul>
Screen flickers or no color	<ul style="list-style-type: none"> <li>• Are the antenna cables properly connected? (Except French model)</li> <li>• Is the TV channel fine tune adjustment properly set? (Except French model)</li> <li>• Are the TV color controls properly set?</li> <li>• Is the Cartridge properly inserted?</li> </ul>
No game sound	<ul style="list-style-type: none"> <li>• Is the TV volume too low or off?</li> <li>• Have the connection cables come loose or become disconnected?</li> </ul>
Picture on TV screen is not steady	<ul style="list-style-type: none"> <li>• Adjust the vertical and horizontal hold controls on your TV.</li> </ul>
Fringes appear on TV during a game	<ul style="list-style-type: none"> <li>• Adjust the manual fine tuning controls on the TV.</li> </ul>
Fringes appear on TV during a broadcast	<ul style="list-style-type: none"> <li>• Is the antenna cable properly connected?</li> <li>• Make sure that you have turned off the power on the Power Base.</li> <li>• Is the RF switch set to "ANT" position? (Except French model)</li> <li>• Is not the Peritel Cable connected? (French model)</li> </ul>

**SEGA**