



The Art of Entertainment



ORDER NO. ARP2779

# PAC-S10 CONTROL PAD CONTROL P

## PAC - S10 AND CPD - S1 HAVE THE FOLLOWING:

Туре	Power Requirement	Remarks		
ZU	DC power supplied from other system component.			

- This manual is applicable to PAC S10/ZU and CPD S1/ZU.
- These products are optional products for LaserActive CLD A100.
- Control Pad CPD S1 is supplied for service as part No. DXX2111.

65.5

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.

Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified sarvice technician.

### WARNING

Lead in solder used in this product is listed by the California Health and Welfare agency as a known reproductive toxicant which may cause birth defects or other reproductive harm (California Health & Safety Code, Section 25249.5).

When servicing or handling circuit boards and other components which contain lead in solder, avoid unprotected skin contact with the solder. Also, when soldering do not inhale any smoke or fumes produced.

# CONTENTS

1. PAC-S10 EXPLODE	D VIEWS AND PARTS LIST 2	2
2. PACKING AND PAR	RTS LIST	3
3. PAC - S10 BLOCK [	DIAGRAM	4
4. PANELFACILITIES		
5. SPECIFICATIONS		5

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801 U.S.A. PIONEER ELECTRONICS OF CANADA, INC. 300 Allstate Parkway Markham, Ontario L3R 0P2 Canada PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911 © PIONEER ELECTRONIC CORPORATION 1993

# 1. PAC-S10 EXPLODED VIEWS AND PARTS LIST

### NOTES:

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The ∆ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by " @" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

Mark	No.	Description	Parts No.	Mark	No.	Description Parts No.	Α
	1 2 3 4 5	Bonnet LH screw Screw Rear panel S Screw	DNE1210 Z39 - 023 PMZ26P100FMC DNC1329 BBZ26P060FMC	N SP	15 16 17 18 19	SDSUB ASSY         DWG1366           Screw         BPZ20P120FMC           Chassis         DNA1128           Screw         DBA1070	
•	6 7 8 9 10	SSUB ASSY SMAIN ASSY Screw Guide S Door spring	DWG1365 DWG1390 BPZ20P060FMC DNK2751 DBH1233		20 21 22 23 24	Active badge DAM1059 Front panel S ASSY - S DXX2127 S seal (ZU) DRW1499 C seal S DRW1541 C seal DRW1543	
NSP	11 12 13 14	Lock plate S Lock plate spring Front panel S Door	DNK2749 DBH1232 DNK2748 DNK2750	N SP N SP	25 26 27 28	S door seal         DRW1498           Connector cap         DNK2821           Cord stopper         Z09 – 061           65 label         ORW1069	
		, SMAIN and SD SUB assemb ed as assembly.	olies are	/	</th <th></th> <th>В</th>		В
						2	
		28	6			5	-
	13	14 11 12 25 10 15	5 5	,27	,	2 26	С
20	3	21 24 24	16		5		
				18		17	D
2	2		18	้ NO	TE:	Screws adjacent to ▼ mark on product are used for disassembly.	


# 2. PACKING AND PARTS LIST

### NOTES

- Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.
- The  $\triangle$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Parts marked by " O" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.


Mark No.	Description	Parts No.	Mark	No.	Description	Parts No.
1	Control pad S (CPD-S1)	DXX2111		6	Polyethelene bag	DHL1077
2	Packing (for CPD - S1)	DHF1033		7	Operating instructions S (English)	DRB1143
3	Mirror mat bag	DHL1081		8	Packing case S	DHG1514
4	Under pad	DHA1238		9	Master case S (for 5 sets)	DHG1532
5			NSP	10	Warranty card	ARY1044
			NSP	11	Caution (ZU)	DRM1138

Note: Control pad S (CPD-SI) has no service part.

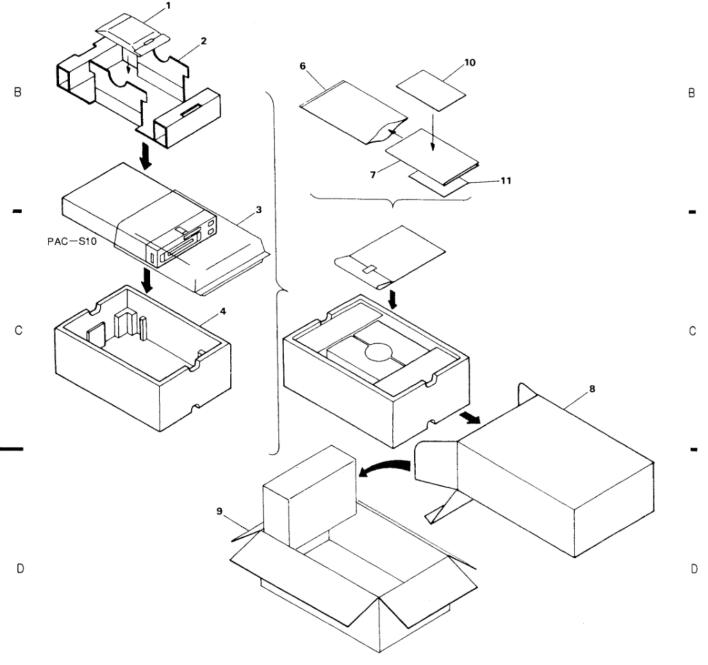

7


# 3. PAC-S10 BLOCK DIAGRAM

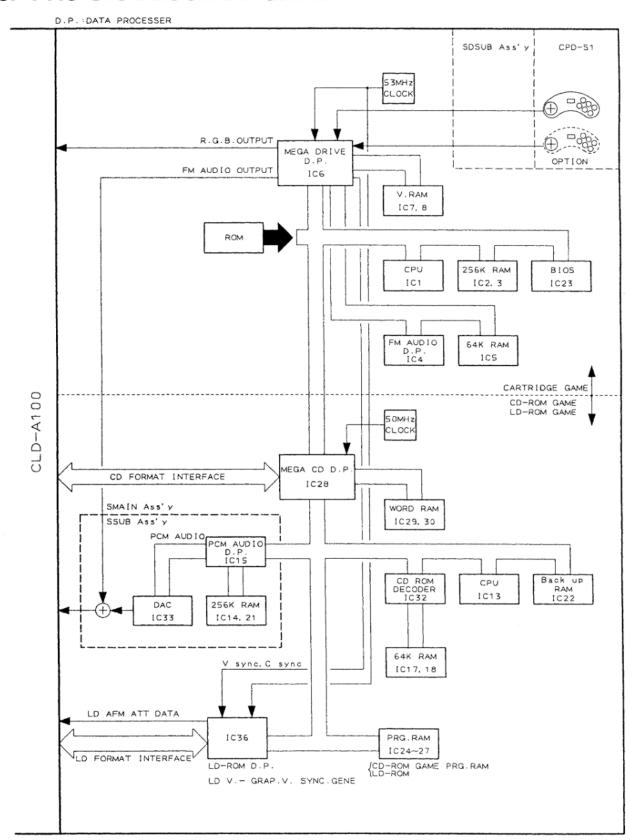


# 4. PANEL FACILITIES

### CONTROL PACK

For how to install/remove the Control Pack, see the operating instructions of the CD\_CDV\_LD\_player compatible with LaserActive.

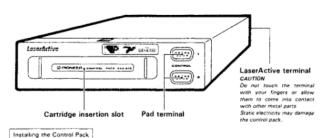

- Turn off the CD CDV LD player compatible with LaserActive.
- . Remove the connector cap on the rear of the Control Pack.
  . While pressing down on the CD CDV LD player compatible with Lashand, attach the Control Pack, making sure it is securely installed. with LaserActive with your

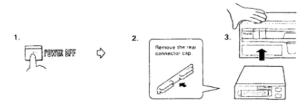


- NOTE

   To install accurately, lightly place one hand on top of the player and with the other hand carefully insert the Control Pack until the front panel is flush with the front panel of the player.

   Do not throw away the connector cap. When the Control Pack is reviewed from the CD CDV LD player compatible with LaserActive for storage, make sure the connector cap is installed before storing the Control Pack.

### CONTROL PAD

Using this pad and by operating the control screen, the performing of LD and CD playback is possible.
 Use for controlling games. The use of each button differs according to the game. Here, the names and call functions of the keys are explained.

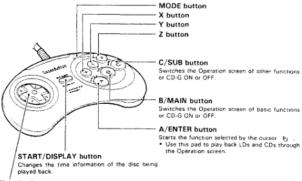

### Direction buttons

Moves the cursor

### Using the 6-Buttons Control Pad

Varing the 0-Buttons. Control Pad.

There are extremely few instances where the game software is restricted to the use of three buttons, where due to the response of the "MODE" and "X, Y, Z" buttons, the controlling of such games can prove to be troublesome. In the event of this, switch OFF the power supply to the CD CDV LD player compatible with LaserActive, and while pressing the "MODE" button on the Control Pad, switch the power supply back oN.

The "MODE" and "X, Y, Z" buttons are rendered unusable, thereby allowing the game to be enjoyed comfortably.



# 5. SPECIFICATIONS

### Input/output terminal:

Cartridge terminal (exclusive for GENESIS) Control Pad terminal LaserActive terminal

## Available software:

MEGA LD (30 cm, 20 cm) SEGA CD Cartridge (for GENESIS) LaserDisc (30 cm, 20 cm) CD VIDEO LD with TOC (30 cm, 20 cm) Compact Disc (12 cm, 8 cm) CD VIDEO SINGLE (12 cm) CD-G (CD graphics)

Depending on the type of repair, the data saved in the internal back-up RAM may be lost. As the contents of the lost data cannot be secured, please take proper steps beforehand to ensure that data are not lost.

### Others

Weight ..... 1.1 kg (excluding the Control Pad) Dimensions ··· 160 (W) x 253 (D) x 40 (H) mm Allowable operating temperature ··· +5 to +35°C Allowable operating humidity ... 5 to 85% (no condensation) Accessory ...... Control Pad (CPD-S1) 1