 


# R-ZONE SUPER SCREEN™

## 1. USING YOUR CARTRIDGE


Your R-Zone Super Screen cartridge comes with a color slide attached. This provides a color background on the Super Screen as you play in-your-face LCD game action! Do not remove this slide unless you would like to use the cartridge for the R-Zone Head Gear which can be purchased separately. Removing the color slide for use with the Super Screen will cause your Super Screen to not function properly. If you have removed the slide to use the cartridge with the Head Gear, simply snap the slide back into place on the slide.

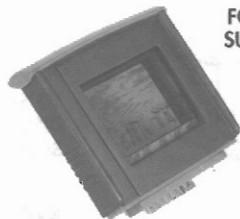

FOR USE WITH THE SUPER SCREEN, DO NOT REMOVE COLOR SLIDE.



FOR HEAD GEAR USE, REMOVE THE COLOR SLIDE.

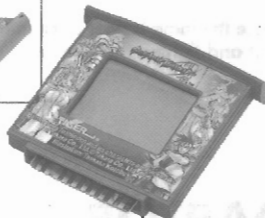

## 2. SETTING UP YOUR SUPER SCREEN

To insert your Super Screen cartridge, make sure your unit is turned off.

Turn your Super Screen unit over. Slide the cartridge into the slot so that the arrows on the cartridge are in line with the arrows on the game unit.

Turn the game unit back over to the proper playing position and lift the adjustable screen towards you until it clicks into a full upward position.

Press the "ON" button to turn on the light and the unit. Press the "OFF" button to turn off the light and the unit.

Adjust focus by the control wheel under the unit. You should focus the foreground images.




# HOW TO USE

## LARGER THAN LIFE LCD GAME ACTION!

The world of R-Zone is always changing! Now you can use any R-Zone game cartridge to "size-up" your game on the largest LCD screen and color backgrounds with the R-Zone Super Screen!

## 3. PLAYING YOUR GAME


Now get ready for in-your-face action on the biggest LCD game screen available! If your image is not clear or hard to see, adjust the contrast of the LCD images using the knob on the right hand side of the Super Screen unit. You can also adjust the volume control using the knob on the left hand side of the unit.

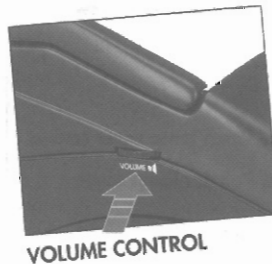

VOLUME CONTROL



CONTRAST CONTROL

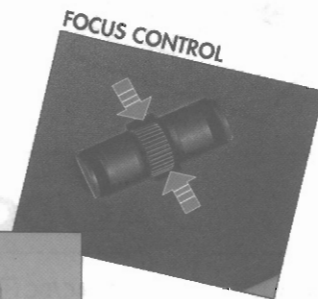

FOCUS CONTROL



# LIGHT BULB REPLACEMENT PROCEDURE

1. Replace with light bulb (model LWSA 401 Mag-lite White Star Krypton Lamp only) which can be found in most hardware stores.




2. Turn off unit & disconnect external power supply (if used).

3. Remove cartridge & open battery compartment screw.

5. Open lamp cover screws.

6. Pull out lamp cover.

4. Pull out batteries.

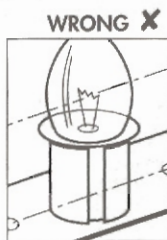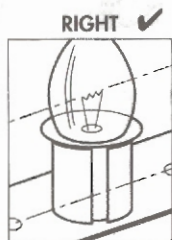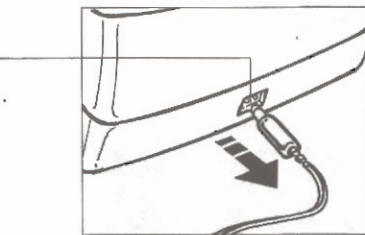

7. Replace bulb and turn bulb filament to parallel the lamp cover long axis. This is important to have best image.

8. Place the lamp holder back into the unit and tighten the screws.

Using other than the recommended light bulbs may result in shorter battery life, or malfunction of the Super Screen.

# BATTERY REPLACEMENT

Insert 4x"D" or "LR20" Alkaline Only Batteries making sure to align "+" and


TO ENSURE PROPER FUNCTION:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Battery insertion/replacement should be done by an adult.
- Replacing the batteries will cause your game to reset, losing all previous scoring or stored information.

# AC/DC ADAPTOR

9V AC/DC  $\ominus \oplus$   
1.0A (1000 mA) adaptor

If unit fails to function with the adaptor (dim or no light), it may be under rated (less the 1000mA) or wrong voltage or polarity.

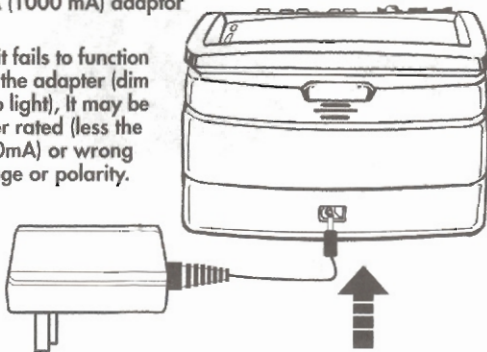

# CAUTION/TROUBLE SHOOTING

In case of difficulty in operating:

- Be sure to use new Alkaline batteries.
- Remove the cartridge, clean the connector with a cotton swab and re-insert into the Super Screen, and then turn the unit back on.
- If you still have trouble, i.e. weak image or no image, replace the batteries or use an AC/DC adaptor (1.0A (1000mA), 9V DC  $\ominus \oplus$ ) with correct rating and polarity. Pull screen to up position, and turn on the unit. If still no image appears, replace the light bulb as explained in photos.
- **BE CAREFUL WHEN REMOVING THE LIGHT BULB!** Light bulb and housing may be very hot, allow the bulb to cool after opening before touching and removing for replacement.

Never play when walking, driving or in any situation when your attention is on the game and not on your surroundings.

You have purchased a state of the art optical instrument. Treat it gently for long playing hours. Treat the screen with special care. Do not scratch it or use abrasive cleaning materials such as paper. Use lens cloth or ordinary tissue paper. If you need to clean oily finger marks, use few drops of soapy water or window cleaning solvent.

TO STORE YOUR R-ZONE SUPER SCREEN, TURN OFF THE UNIT DISCONNECT FROM EXTERNAL POWER (IF USED) AND FOLD THE SCREEN TO THE FOLDED POSITION FOR PROTECTION.

# 90-DAY LIMITED WARRANTY

Tiger Electronics, Inc. (TEI) warrants to the original consumer purchaser of any of its electronic games or toys that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase.

During this 90-day warranty period, the product will either be repaired or replaced (at our option) without charge to the purchaser, when returned either to the dealer with proof of the date of purchase or to TEI when returned prepaid and insured with proof of the date of purchase.

Products returned to TEI without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at our option) for a service charge of US\$15.00. Make check or money order payable to Tiger Electronics, Inc.

TEI will not be liable for loss of use of the product or other incidental or consequential costs, expenses, or damages incurred by the purchaser. Any implied warranties are limited in duration to the 90-day period from the original date of purchase.

All products returned must be shipped prepaid and insured for loss or damage to:

Tiger Electronics, Inc. Repair Dept.  
980 Woodlands Parkway, Vernon Hills, Illinois 60061 U.S.A.

1. Pack the product carefully in the original box and/or other packing materials sufficient to avoid damage during shipment.
2. Include a letter with a complete description of the defect, a check if the product is beyond the 90-day warranty, and your printed name, address and telephone number.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state so the foregoing limitations may not apply to you. This warranty does not cover damages resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

**TIGER ELECTRONICS**  
INC.®

ALL RIGHTS RESERVED  
71302011TIE-1

PRINTED IN HONG KONG

PATENTS PENDING